

RF chips instruction manual:

(EPSON C3000/C4100/DELL 5100N/Minolta 3300/ Xerox 6250)



Use tool to completely take out the used chip inside the chip holder.



Take out the used chip and put the chip holder back to toner cartridge.



Have the holder clip into the right place.



Insert our new chip into the hole. Have the clip into the right place When the chip is in the right place, it is even to the chip holder.

Have a tape to fix the chip.