



RF chips instruction manual:

(EPSON C1100/CX11F/DELL 3000N/3100N/Fuji-Xerox C525A)



Use tool to completely take out the used chip.



Insert our new chip into the hole.
Have the chip clips into the right place



When the chip is in the right place,
it is even to the chip holder.

For more information, contact us as below:

E-mail: info@tonerchips.com